

MAYTAG®**CONTROL PANEL PARTS**



For Models: MMV4203DW00, MMV4203DB00, MMV4203DS00, MMV4203DQ00

(White)

(Black)

(Stainless)

(Bisque)

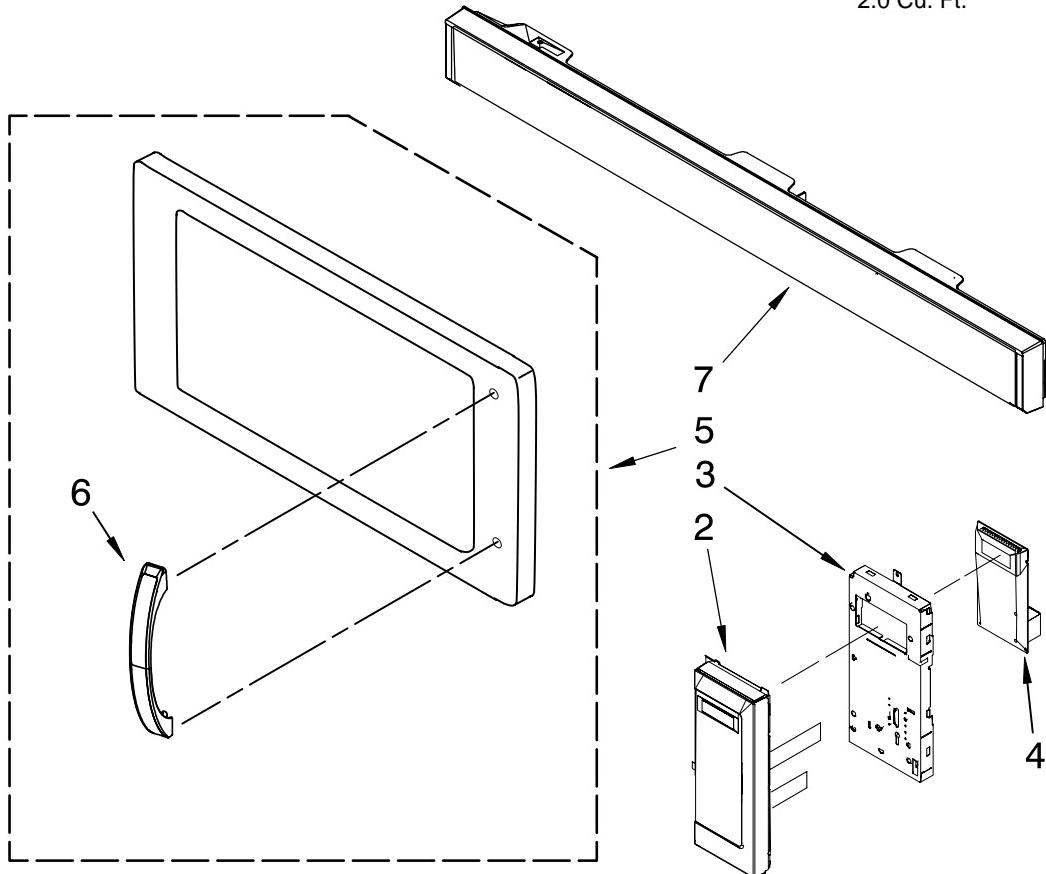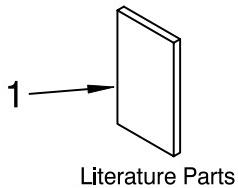
MICROWAVE OVEN/HOOD
2.0 Cu. Ft.

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	W10188231 W10188234 W10188232 W10188238	Literature U & C Guide Tech Sheet, Slim Label, Cook Guide Install, Instruct	3	W10258165	Bracket, Control	6	W10258181	Handle, Door Black
2	W10258188 W10258189 W10258190 W10258191	Panel Asy, Control Membrane, Lens and Bracket Black White Stainless Bisque	4	W10258171	Microcomputer Complete Door	7	W10258184 W10258185 W10258186 W10258187 W10258215 W10258216 W10258217 W10258218	White Stainless Bisque Grille Assembly Black White Stainless Bisque

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET AND AIR FLOW PARTS

For Models: MMV4203DW00, MMV4203DB00, MMV4203DS00, MMV4203DQ00
 (White) (Black) (Stainless) (Bisque)

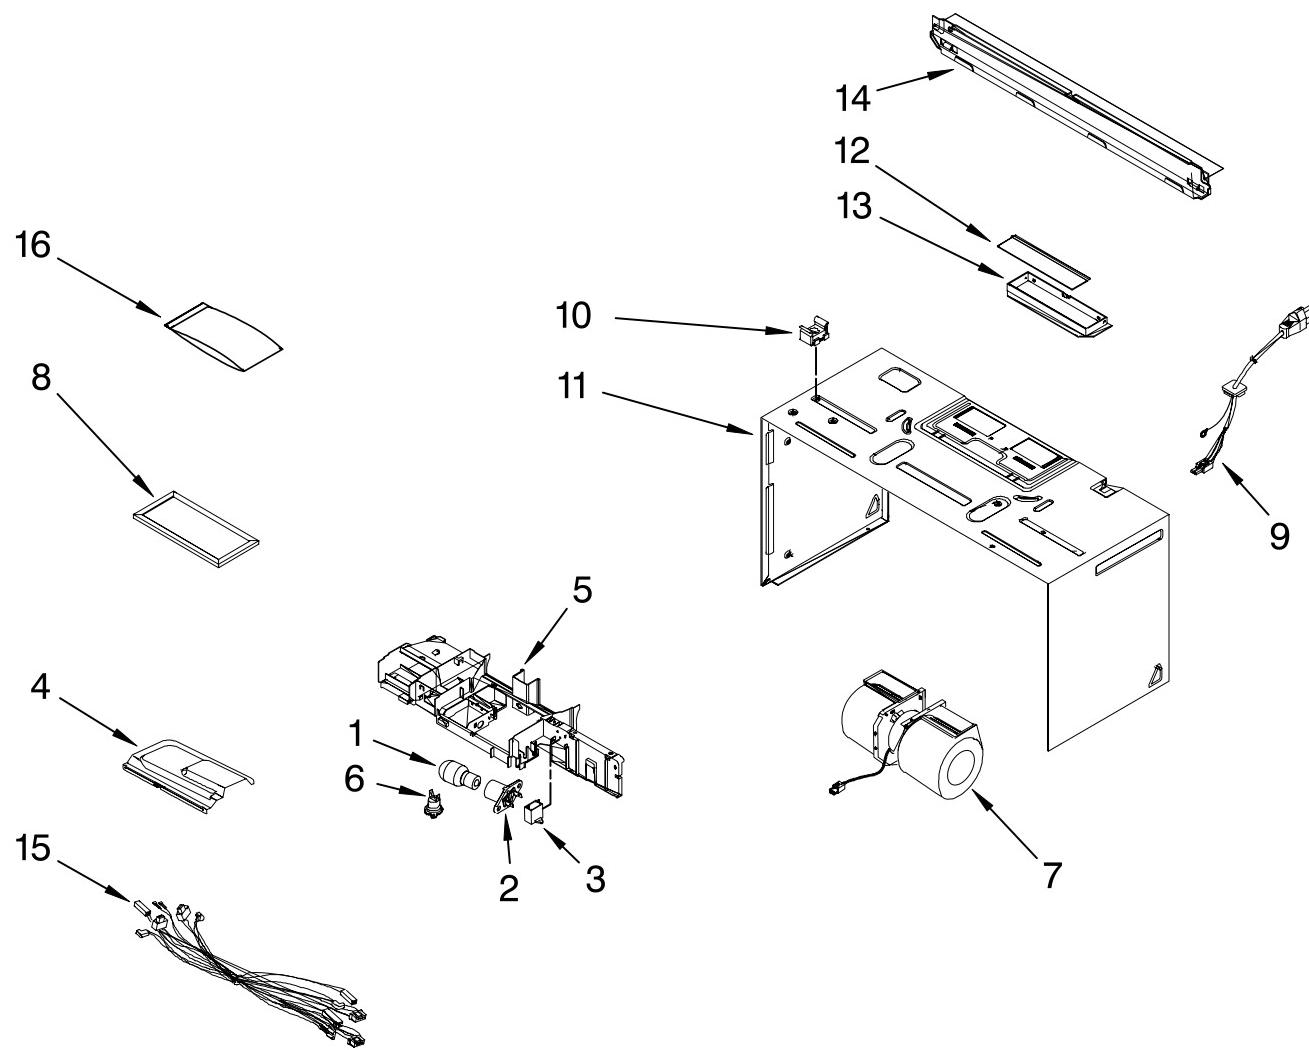

Illus. No.	Part No.	DESCRIPTION
1	4713-001013	Lamp
2	DE47-00006A	Holder, Lamp
3	DE59-50002A	Capacitor, Motor
4	W10250842	Cover, Lamp
5	W10258160	Assy, Duct Upper
6	DE47-20059A	Thermostat
7	W10181452	Motor, Fan Assy
8	DE63-00367D	Filter, Charcoal

Illus. No.	Part No.	DESCRIPTION
9	DE96-00218A	Cord, Power
10	DE92-90508A	Holder Nut, Assy
11	W10187744	Case, Outer Black
	W10192096	White
	W10199858	Bisque
12	W10197773	Plate, Damper
13	DE72-40022A	Damper, Assembly
14	DE70-00378A	Plate, Mounting


Illus. No.	Part No.	DESCRIPTION
15	W10258198	Main Harness
16	DE92-90505E	Install, Hardware
<hr/>		
Following Parts Not Illustrated		
	W10188741	Template, Wall
	W10188240	Template, Upper

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERIOR AND VENTILATION PARTS

For Models: MMV4203DW00, MMV4203DB00, MMV4203DS00, MMV4203DQ00

(White) (Black) (Stainless) (Bisque)

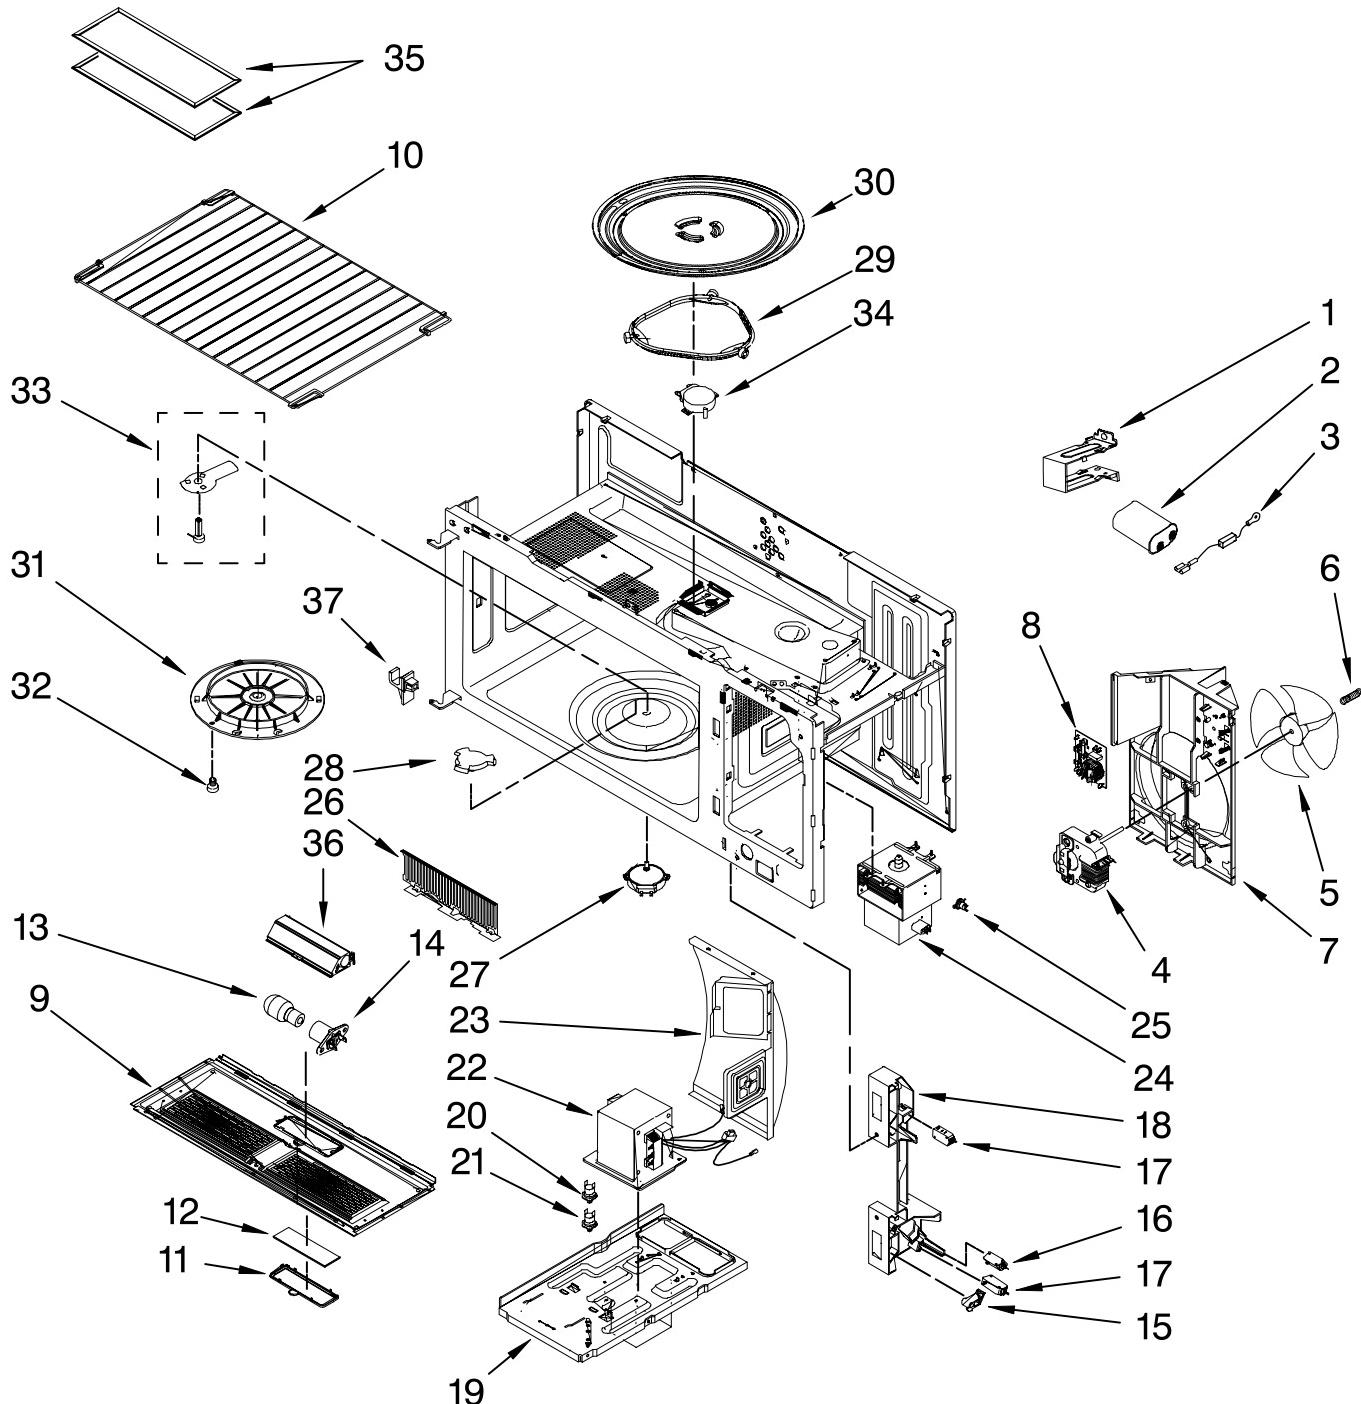

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERIOR AND VENTILATION PARTS

For Models: MMV4203DW00, MMV4203DB00, MMV4203DS00, MMV4203DQ00

(White) (Black) (Stainless) (Bisque)

Illus. No.	Part No.	DESCRIPTION
1	DE61-00115A	Bracket, Capacitor
2	2501-001016	Capacitor
3	DE91-70063D	Diode, H.V.
4	W10250841	Motor, Fan
5	DE31-90051A	Blade, Fan
6	W10260124	Spring, Blade
7	W10197780	Guide, Suction
8	DE96-00400B	Filter, Noise
9		Plate, Bottom
	W10192477	Black
	W10192097	White
10	W10258237	Rack, Cooking
11		Holder, Glass
	DE63-00137B	Black
	DE63-00137C	White
12	DE64-00911A	Glass, Lamp
13	4713-001013	Lamp
14	DE47-00006A	Holder, Lamp
15	DE66-90106B	Lever, Switch
16	3405-001033	Switch, Micro
17	3405-001034	Switch, Micro
18	DE66-00168A	Latch Board
19	W10187747	Plate, Base
20	DE47-20059A	SW-Thermo
21	DE47-20034A	Thermostat
22	W10250839	Transformer, H.V.
23	W10197689	Duct, Magnetron
24	W10126786	Magnetron
25	DE47-20007A	Thermostat
26	W10197680	Cover, Front
27	DE31-10172A	Motor, Turntable
28	DE67-00213A	Coupler
29	DE97-00637A	Guide, Tray
30	DE74-20002A	Tray, Cooking
31	DE71-60121A	Cover, Stirrer
32	DE66-20095B	Button, Lock
33	W10250840	Stirrer, Assembly
34	DE31-10173A	Motor, Drive
35	DE63-00196A	Filter, Air
36	DE61-00407A	Bracket, Lamp
37	DE61-00375A	Holder, Rack

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST